
庞伯特[®]智能落地式发球机器人

HALØ 使用指南

Pongbot®Smart Table Tennis Serving Robot Operation Manual

型号 (Model): HALO PRO 版本 (Version): V1.0

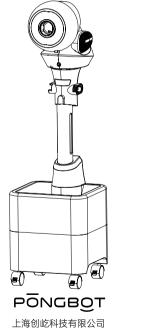

Shanghai Pongbot Co.,Ltd

如您在使用过程中,遇到任何问题,均可登录官网 或来电进行咨询!

If you encounter any problems during use, please call customer service or consult the official website.

创屹官方网址 (Website): www.pong-bot.com 3. 配网指导 (WLAN Connection) 售后服务热线 (Customer Service): 400-190-6688



扫码观看安装视频

Scan and watch Installation Instruction

official Wechat account

关注创屹微信公众号 了解最新产品资讯 Scan and follow our

】目录 (Table of Contents)


1. 产品构成 (Product Info)

2. 安装指导 (Installation)

4. APP 使用 (APP Features)

)产品构成 (Product Info)

1 机器人 (Serving Robot)

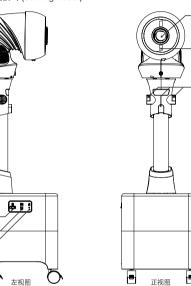

- 5 电源开关 Ball Export Portal Power Button
 - 6 电源适配器接口 Power Adapter

1 出球口

2 指示灯

LED Indicators

3 回收球网固定组件

Ball Recycling Net


Stabilizing Unit

4 回球模块

- 8 自锁万向轮
- Ball Auto-Retrieving Module

2 回收球网 (Ball Recycling Net)




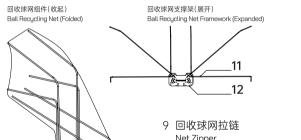

回收球网组件(收起)

7 配网/配对开关 WLAN/Bluetooth Connection

Front View

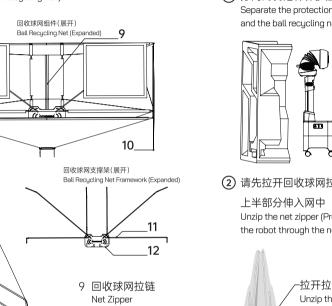

一拉开拉链 / Unzip the net zipper

10 回收球网固定组 Net Stabilizina Strip

1 回收球网支撑管 Net Support Poles

 
2 回收球网固定板

Net Support Plate

13 回收球网固定架 Net Stabilizing Poles


安装指导 (Installation)

) 分离两侧泡棉保护层,取出机器人及回收球网组件 Separate the protection foam on both sides, take out the robot



请确保此面与回收球网 2) 请先拉开回收球网拉链(见产品构成 9),并将机器人 固定板(见产品构成 12)贴合____

Unzip the net zipper (Product Info 9) and put the upper body of Please make sure that this flat surface is the robot through the net as shown below touching the net support plate (Product Info 12)

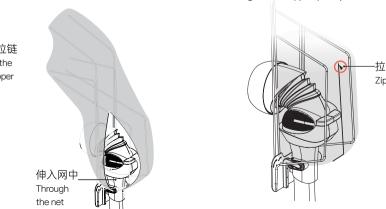

构成 3).将球网拉链拉合

(3) 在确保机器人上半部分伸入网中后,将回收球网 (4) 将回收球网组件完全展开,确保其两侧支撑杆(见产品 固定架(见产品构成13)插入其固定组件(见产品 构成 11)末端贴合于球桌边缘后,将万向轮锁定(见产品 构成8)(注意:此时机器人位于1号位;2号与3号位 Please make sure that the upper body of the robot is put

距地面高度为 76cm

Please make sure that the

vertical distance between table


surface and the ground is 76cm

摆放详情见 APP 使用) through the net, then insert net stabilizing poles (Product Info Fully expand the ball recycling net, make sure that the ends of 13) into the stabilizing unit (Product Info 3) and zip up the net

the two support poles on the sides (Product Info 11) are touching the table edge, then lock the castors (Product Info 8) (Note that the robot is placed in position 1 as shown below)



(5) 在确定好机器人位置后,将回收球网两侧固定绳 (见产品构成10)系干球桌两侧 并拉直 Once the robot is put in place, tie the net stabilizing strips (Product Info 10) to table and straighten the net

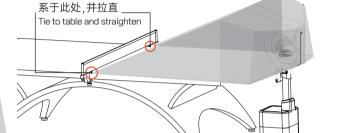

After installing the app, create an account and log in.



2.1 点击"+"按钮添加设备 2.2 扫描设备二维码 2.3 确认设备信息

我的智能体育

Click "+" to add new device

Scan device QR (located information on the side of Ball Auto- and continue Retrieving Module)

APP 完成 请通过以下渠道下载 APP H 99条目支持使用2 4GHz Wi-FiSI使使用 W-FI名称只支持英文字符及数字

For your convenience, the following steps require the use of Pongbot APP, please download via:

① 为便于您将设备连网,接下来的步骤需要使用**庞伯特**



】配网指导 (WLAN Connection)

I. 扫码下载 (Scan QR code)

2. 官网下载 (Official website): www.pong-bot.com

二维码添加设备

APP 及相关服务目前仅限中国大陆地区使用 Currently APP and related services are only available in China

② 请在注册账号后登录,进入 APP

。确保手机已经连接至可上网的 Wi-Fi 。设备只支持使用 2.4HzWi-Fi 连接使用,请选择当前手机所连接的 Wi-Fi 并 输入对应密码后进行网络连接

③ 开始设备连网

选择设备工作Wi-Fi

Connecting device to internet

Make sure your phone is connected to Wi-Fi

• Please note that this device supports only 2.4HzWi-Fi. Select the Wi-Fi that

your phone is currently connected to and enter password

。开机状态下,请于机器人侧面找到配网按键(见产品构成7),按下"按键"

5 秒后松开,进入网络配置模式

 Make sure that the device is plugged in, press and hold "Key" button (Product Info 7) for 5 sec to enter internet-connection mode

正在配网时、机器人指示灯呈绿色慢闪烁 。请在确认机器人进入配网模式后点击"下一步"

· During internet-connection mode, the LED indicator should flash in green Confirm and make sure the device has entered internet-connection mode,

开机状态下,读于机器人侧窗投到配网按键(如下图)。 按下"按键"5秒后松开,由入网络配置模式

于背面继续

This sheet is designed for position 2 and 3 placement

Read and follow instructions, use this operation manual as a guide to properly place the robot at either position 2 or 3 according to your need

4 设备连网成功后机器人指示灯呈蓝色常亮 After a successful internet-connection, the LED indicator



(5) 启动设备,即可开始体验

should light up in blue

Initiate device, then it's readu for use



Select the connected device Initiate device

5.1 点击已连接的设备

5.3 开始体验

Ready for use



6 请先选择机器人摆放位置:

Please choose a position for robot placement ∘1号位为机器人默认位置(摆放详情见安装指导 2-5)

- Position 1 is a default position (see Installation 2-5 for details)

· 2 号位摆放:请将此使用指南完全展开(注意:请确保 纸张完全展平)将带有"▮"的一边与球桌端线(即短边)

对齐后,根据提示将附赠的定位贴纸贴于**球桌侧边**。

将机器人侧面固定组件(见产品构成 3)与贴纸对齐 贴合即可(如右图所示)

Put locating sticker here

说明书 Operation Manual

69cm

2号位 Position 2

3号位 Position 3

→ 球网 Net

For position 2 placement, please fully expand this operation manual, take the sheet edge with "\", align it with table end line, and put a locating sticker on the side of the table as a marker (as shown in the picture on the right). Then, align the net stabilizing unit on the side of the robot (Product Info 3) with the locating sticker, make sure that the robot is touching

∘ 3 号位摆放:参考 2 号位摆放

• For position 3 placement, please refer to position 2 placement for details



Position 3

APP 使用 (APP Features) 目前仅限中国大陆地区使用 (Currently APP and related services are only available in China)

在确认机器人摆放位置后,可搜索选择您希望体验的

组合球,也可通过单点,两点或多点球进行筛选

You may search and choose the desired ball-combination, or you may filter to find various landing-point categories



う 如果现有组合并不能满足您的体验需求,您也可以添加 3.1 打开"指示灯自定义" 自定义组合(此组合内支持机器人指示灯颜色自定义) Turn on "Color Customization"

If the pre-set ball-combinations do not meet your needs, you may add and customize training drills accordingly

点击添加



7 可根据喜好调整机器人指示灯颜色(每个单球支持

30 种灯光颜色选择)

Based on your preference, you may customize LED light color for each ball (a maximum of 30 colors allowed)



3.2 选择当前单球的指示灯

颜色(点击切换)

Choose a color for the ball you're currently editing (click to switch balls)

Pongbot®Smart Table Tennis Serving Robot

Customer Info

Warranty Card

_____ Postal Code :

Service: 400-190-6688

Date of Sale:

Invoice #:

Retailer Stamp

foreign matter enters the device, poor transportation by customers, etc.)

- Pongbot[®]Smart Table Tennis Serving Robot strictly follows and executes national warranty regulations. Pongbot values and respects consumers' rights, we solemnly promise to provide post-sales services, maintenance, exchanges and returns under national regulations.
- I. Human factors and abnormalities that cause damage to the device (ex. harmful power source,
- 2. Disassemble and maintenance behavior by non-appointed personnel that causes damage 3. Performance index and technical parameters meet the standards of product design
- and regulations 4. Forced device operation when parts have been damaged or aged
- 5. Use of non-original accessories (not manufactured by Pongbot) that causes error or damage
- 6. Unavoidable factors that cause device damage, including natural disasters, such as earthquake, flood, fire, etc.
- 7. Products that exceed warranty periods

三包凭证

庞伯特[®]智能落地式发球机器人

2号与3号位定位使用

For Position 2 and 3 Placement

(见产品构成 3)与贴纸对齐贴合即可

with the sticker, make sure that the robot is touching table edge

将定位贴纸与此对齐一

Align locating sticker to this

定位贴纸贴至球桌侧边后,将机器人侧面固定组件

Put a locating sticker on the side of the table as a marker (as shown in the picture

below). Then, align the net stabilizing unit on the side of the robot (Product Info 3)

用户信息

服务热线: 400-190-6688

销售日期

。庞伯特°智能落地式发球机器人严格执行国家三包法,遵守行业准则,并充分 尊重消费者权益,为消费者提供全方位服务保障和郑重承诺,对国家规定或者 与消费者约定包修、包换、包退的商品,创屹科技承诺负责修理、更换或者退货

- 。以下情况不属于三包范围:
- 1. 人为因素和非正常原因(不良的电源环境、异物进入设备、客户不良运输等)
- 2. 非创屹科技指定服务人员所拆解、维修等行为造成设备的损坏
- 3. 性能指标或技术参数达到产品设计及说明标准的
- 4. 在零部件发生老化或损坏的情况下强制运行造成设备的损坏。
- 5. 使用非创屹科技原厂配件造成设备的故障或损坏
- 6. 不可抗因素造成设备损坏,如地震、洪水、火灾等自然灾害
- 7. 已超过保修期的产品

或侧桌粮至视, 不核地已挺初立宝斜箭

与球桌短边对齐

Align with table end line

定位贴纸

Put locating sticker on

请将定位贴纸与此对齐、**贴至球桌侧边**

the side of the table

安全信息 Safety Information

在使用和操作设备前,为确保设备性能最佳。并避免出现危险或非法情况。 请查阅并遵循所有的安全信息

To avoid danger and illegality, please carefully read and follow all of the below mentioned safetu information prior to installation and utilization of the device

操作与安全 Safety Instructions

为了防止可能的身体疲劳,请勿长时间使用锻炼

- 。请在温度 -10℃~45℃ 范围内使用本设备,并在此温度范围内存放设备及其配件 当环境温度过高或过低时 可能会引起设备故障
- 。请勿将设备暴露在高温或发热设备的周围,如取暖器、微波炉、烤箱或热水器等
- 使用设备时 电源插座应安装在设备附近并应易干触及
- 。当设备不使用时,请断开电源适配器与设备的连接并从电源插座上拔掉电源
- 使用未经认可或不兼容的电源适配器。可能引发火灾、爆炸、设备损坏或其他危 。只能使用设备制造商认可且与此型号设备配套的配件。如果使用其他类型的配件
- 可能违反本国设备保修条款及相关规定,并可能导致安全事故。如需获取认可的
- 配件,请与创修科技客户服务中心联系 。使用非授权第三方软件升级设备固件和系统,可能存在设备无法使用或者泄漏
- To avoid phusical fatique, please do not exercise long-termlu
- Please use and store the device and its accessories under the environment of -10°C ~ 45°C. When the temperature is too high or low, an error might occur

您个人信息等安全风险。建议您使用官方 APP 进行升级

- Please do not expose device to surroundings of other high-temperature devices, including
- heater, microwave, oven, water heater, etc.
- During use, the power outlet should be close to the device and within reach When not in use, please disconnect the power adapter from the device and remove the power plus
- from the outlet • Be aware that uncertified or incompatible power adapter might cause fire, explosion and other
- Please only use accessories that are certified by the device manufacturer or corollary equipment
- of the device. Any other type of accessories might result in violation of national warranty and related regulations that could cause safetu incidents. Please contact Pongbot's Customer Servi Center for certified accessories
- · Use of uncertified, third-party software during firmware and system update might result in dysfunctional device or leakage of personal information. To upgrade, use of official APP is highly recommended



(, +86 4001906688

marketing@pong-bot.com

@ www.pong-bot.com

版权所有 ◎ 上海创览科技有限公司、保留一切权力。本指南仅供参考、不构成任何形式的承诺、产品(包括但不限于颜色、尺寸、重量等)请以实物为准。

Copyright © Shanghai Pongbot Co., LTD. All rights reserved. This guide is for reference (including but not limited to color, size, weight, etc.) shall prevail in kind.